

SPORT UPPER FRONT BUMPER KIT



P/N 2881525

APPLICATION

Verify accessory fitment at Polaris.com.


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This kit contains parts for installation of the Sport Upper Front Bumper only. Prior installation of the Sport Low Profile Front Bumper Kit, PN 2881094, is also required (sold separately).

This Kit includes:

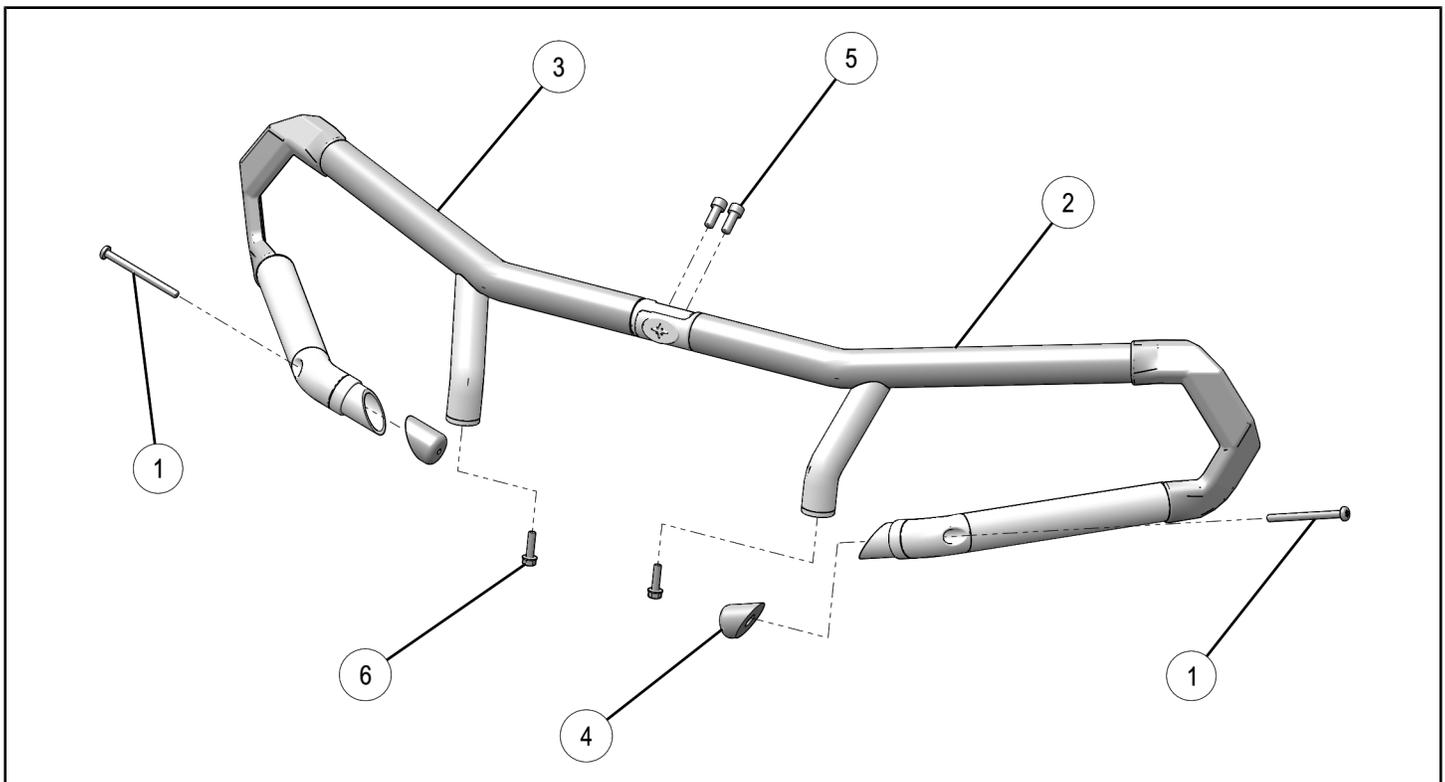

REF	QTY	PART DESCRIPTION	PART NUMBER
1*	2	Bolt, Torx® Pan Head - M8 X 1.25 X 100	-
2	1	Bumper, Upper Front, LH	-
3	1	Bumper, Upper Front, RH	-
4	2	Threaded Mount	-
5*	2	Screw, Socket Head - M10 X 1.5 X 25	7517358
6*	2	Screw, Hex Flange - M8 X 1.25 X 30	7520234
		Instructions	9926563

Items marked (*) are included in Hardware Kit PN 2206112.

TOOLS REQUIRED

- Safety Glasses
- Screwdriver Set, Torx®
- Socket Set, Hex Bit, Metric
- Socket Set, Metric
- Torque Wrench

IMPORTANT



Your Sport Upper Front Bumper Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 20 minutes

INSTALLATION INSTRUCTIONS



1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove plug from each end of existing bumper (A). Plugs will not be reused.
4. Fully insert threaded mount (4) and tapered end of LH bumper (2) into existing bumper (A).

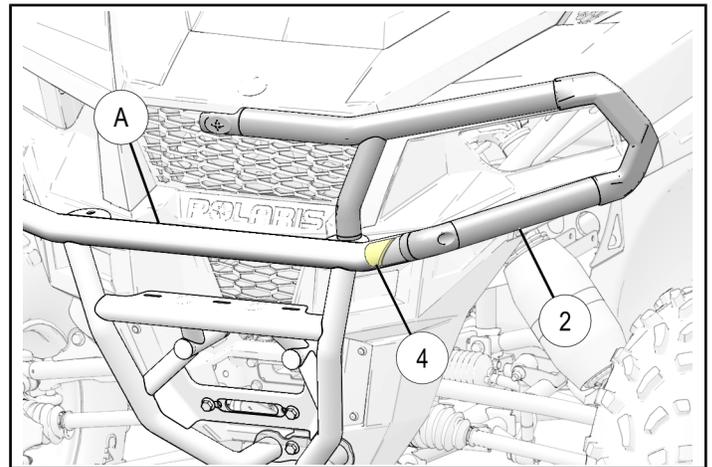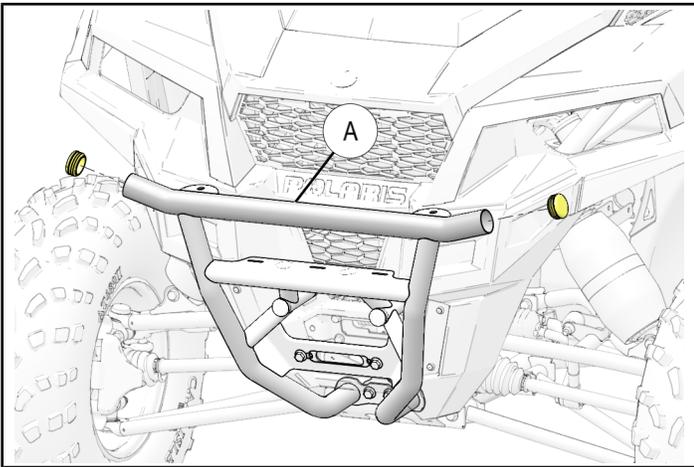

3. Loosely install threaded mount (4) to tapered end of LH bumper (2) using screw (1). Screw should engage only a few threads of threaded mount.


NOTE

Over-tightening screw will prevent new bumper from entering opening in existing bumper (A).

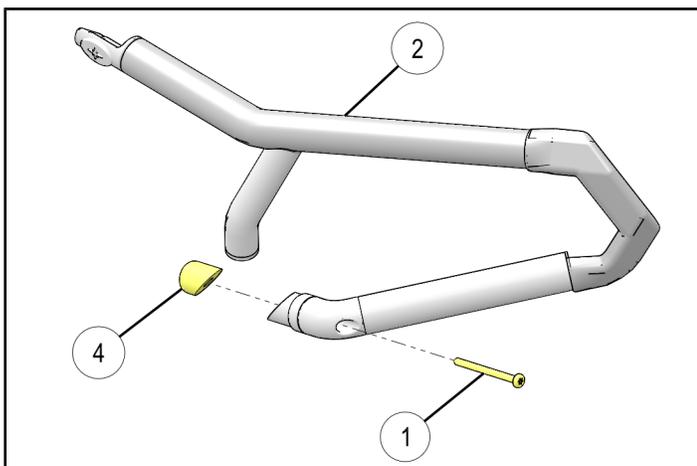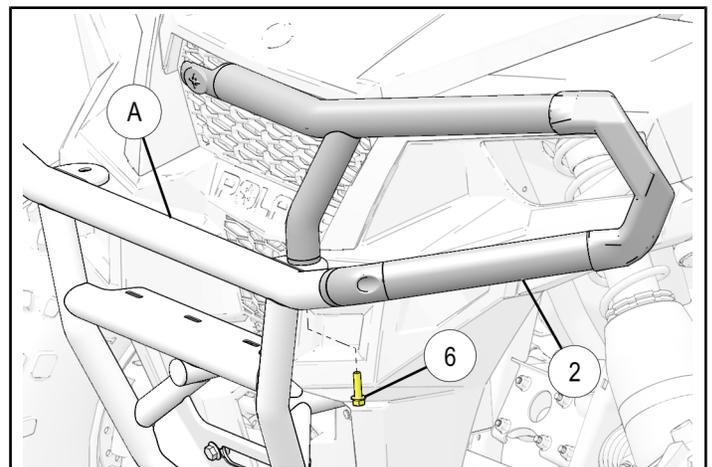

6. Repeat Steps 3-5 for RH bumper (3).

7. Install RH bumper ③ to LH bumper ② using two screws ⑤.

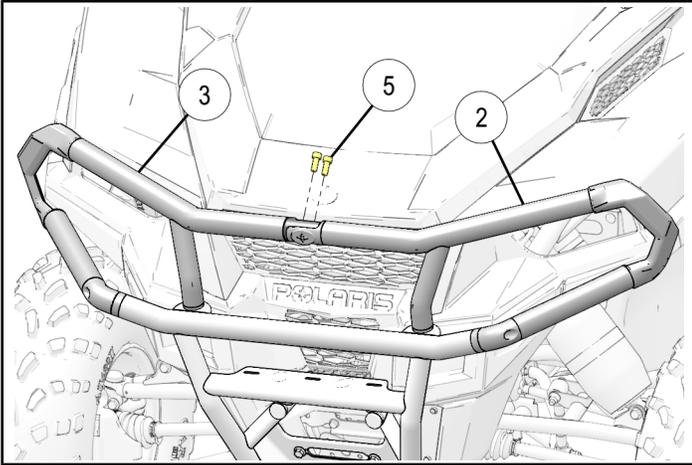

8. Torque all screws to specification.

TORQUE

M8 screws ①⑥: 16 ± 2 ft. lbs. (22 ± 2 Nm)

M10 screws ⑤: 40 ft. lbs. (54 Nm)