

STORAGE BOX KIT



P/N 2881527

APPLICATION


Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

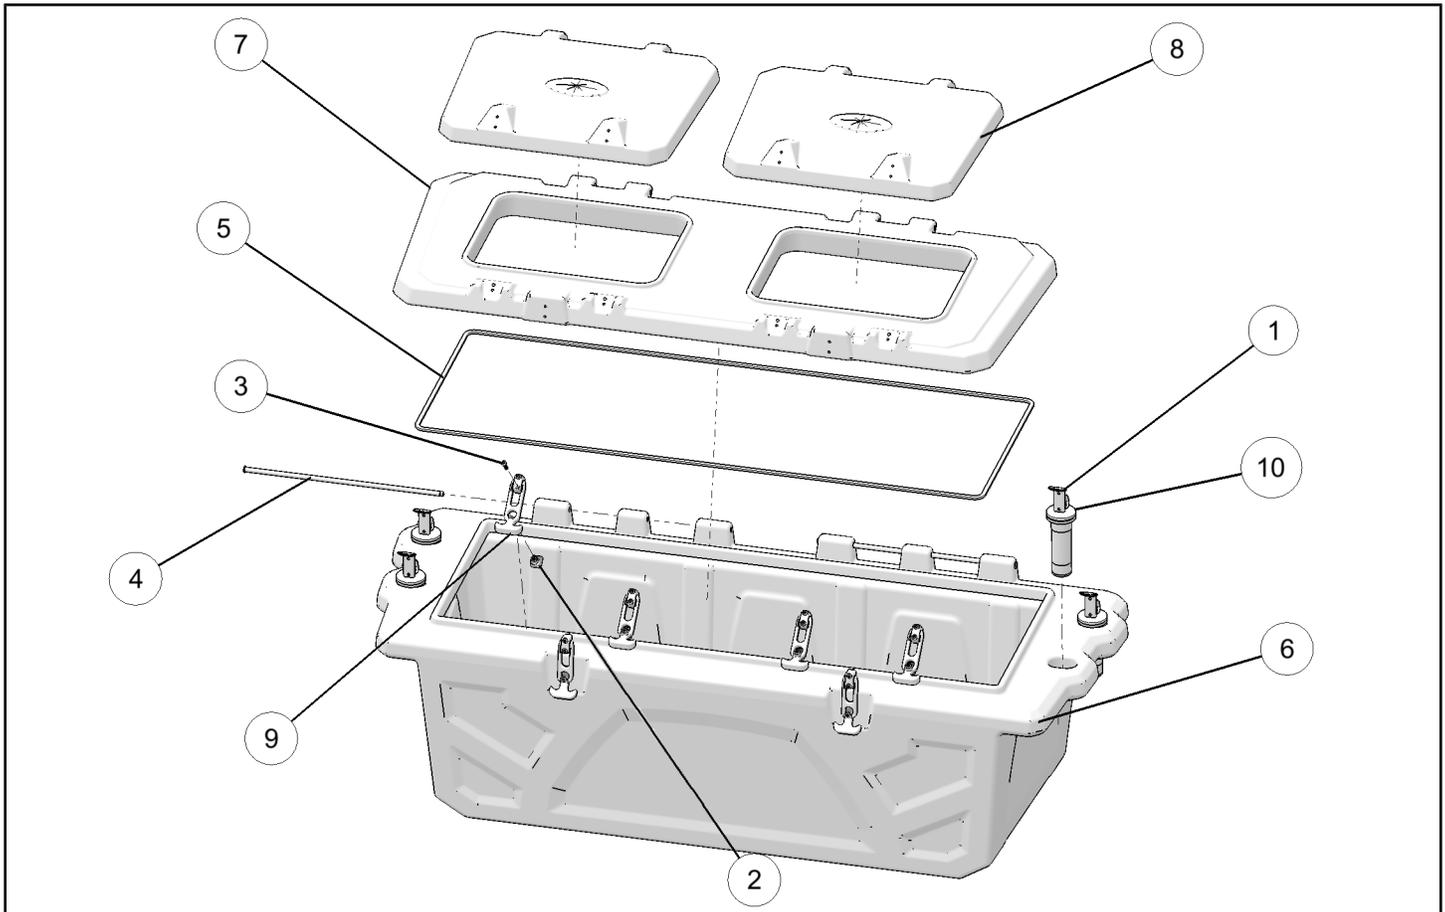

REF	QTY	PART DESCRIPTION	PART NUMBER
1	4	Expansion Anchor Kit	2875250
2	6	Keeper, Latch	-
3	12	Screw - #10 X 1-1/4, Hi/Lo	-
4	2	Hinge Pin - 0.315 X 9.140	-
5	1	Gasket	-
6	1	Storage Box	5452648
7	1	Lid, Main	5452649

REF	QTY	PART DESCRIPTION	PART NUMBER
8	2	Lid, Side	5452650
9	6	Latch	7081939
10	4	Washer, Steel - 50.8 X 8.38 X 5	-
	1	Instructions	9927203

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Metric

IMPORTANT



Your STORAGE BOX KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 10 minutes

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Assemble four LOCK & RIDE® expansion anchors ① per expansion anchor kit instructions except as follows: Insert steel washer ⑩ between plastic washer (A) and rubber expander (B) as shown.
3. Place storage box ⑥ in forward end of bed, then fully insert four unlocked expansion anchors ① through box mounting holes into bed as shown.

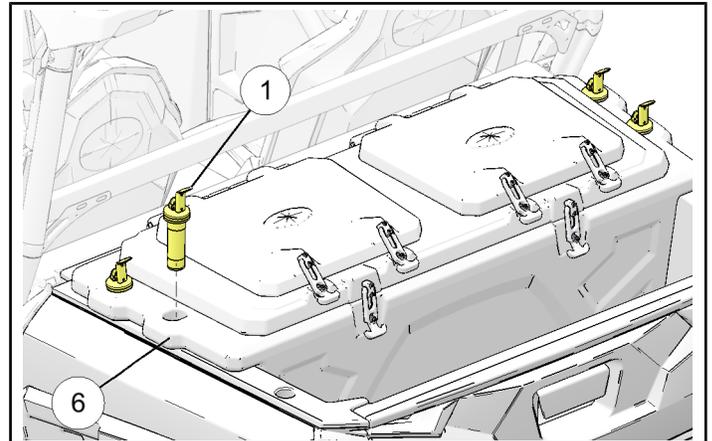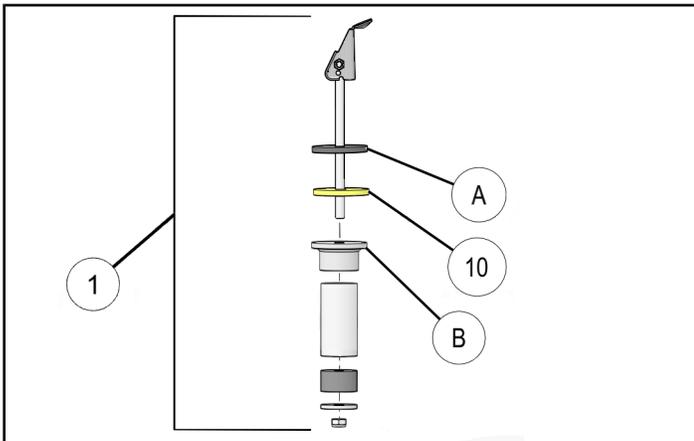

4. Depress expansion anchor ① cams to lock storage box ⑥ in bed as shown. If installation is loose, remove anchor from box, tighten nut at anchor base, and reinstall.

